

Quick Start Guide



Tools and Material needed:

Drill, 9/64" Drill bit, screws for monitor attachment (not included)

TATTLE MONITORS
Checking in when you can't!

Tattle Cloud - Software Setup

**** Complete this step before plugging in your hub or turning on your monitors ****

Tattle Cloud is our web based software that is required to view your monitors info. If you already have a Tattle Monitors cloud account, go to <https://cloud.tattlemonitors.com/login.php> or use the QR code to the right and login.



Login

If you don't have an account, go to <https://tattlemonitors.com/accountNew.php> and create one. Or scan the QR code to the right to create one.



Create Account

In the Tattle Cloud look for "walk-thru" on the menu bar under networks. This will show you how to setup your hub and monitors onto your cloud account.

**** IMPORTANT ****

Hubs and monitors should be setup on your account before hardware set-up.

Hardware Setup (Hub)

1. Connect antennas to your hub.
2. Connect power adapter.
3. Connect Ethernet cable to Ethernet Port labeled ETH0.
4. Connect Ethernet cable to Router
5. Connect the power supply to your power outlet

******If you are on an accessed controlled corporate network you will need to have your IT department grant access to this device.**

Continue on back.

Hardware Setup (Monitor)

1. Attach antenna.
2. Loosen screws on top of monitor and remove the cover.
3. If batteries are not installed, install them now.
4. Move power switch from left to right. You'll see "ON" on the board.
5. Reattach the cover.
6. Install monitor onto mitigation system.



Monitor video set-up

Monitor Attachment

1. Mount monitor on to or next to mitigation system. (screws not provided)
2. Connect supplied hose to port P2, leave other port empty.
3. Drill hole in system that is at least 2" lower than the monitor and insert other end of tube.

****IMPORTANT****

Hose must not create a water trap. Hose should always be at a down angle from the monitor to the connection of the system.